

QA Critical check points	Tick



KJ Precision Engineering

16/388 Newman Road
 Geebung QLD 4034
 Australia
sales@kjeng.com.au
www.kjeng.com.au

Product	Series 6 Installation Manual		
Part	Code		
Drawn by	Peter Thompson	Date	Thursday, 4 August 2016
Drw #	MS--SOP1	Material	
Finish		Scale: 1:	Rev: SHEET 1 OF 3




Connect the Piezo Lead to the connector on the Circuit Board titled "PIEZO"

Connect the Power Lead to the connector on the Circuit board titled "LINE"

Connect incoming phone wire to terminal indicated

Connect other incoming phone wire to terminal indicated

Pass incoming phone line through the gland and tighten the gland nut to seal against the phone cable.

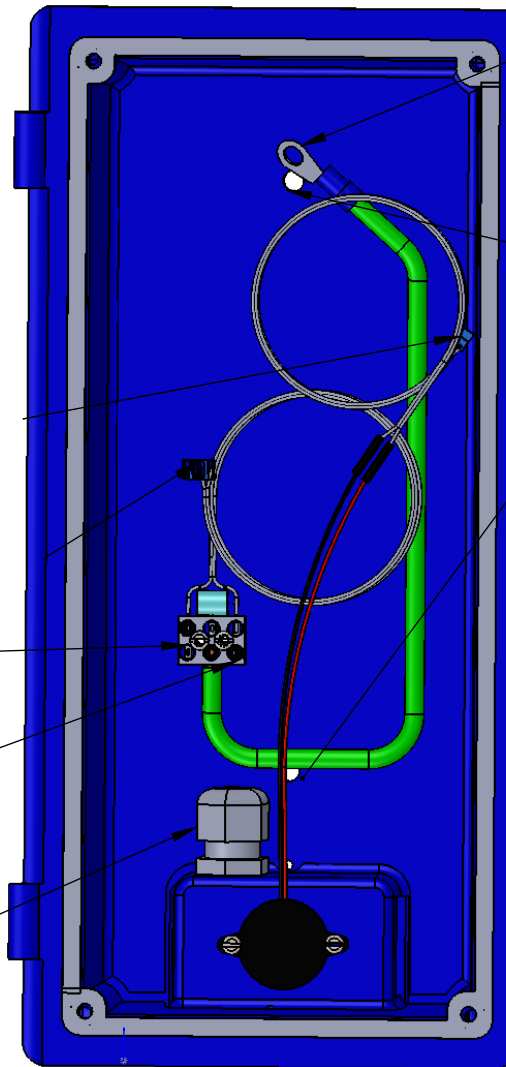

Fit the Earth Lead to the top mounting screw when mounting the phone

Mount the phone to the wall or pole using the two mounting holes


QA Critical check points	Tick




KJ Precision Engineering

16/388 Newman Road
Geebung QLD 4034
Australia
sales@kjeng.com.au
www.kjeng.com.au

Product	Series 6 Intstallation Manual		
Part	Mounting	Code	
Drawn by	Peter Thompson	Date	Thursday, 4 August 2016
Drw #	MS--SOP1	Material	
Finish		Scale: 1:	Rev: SHEET 2 OF 3

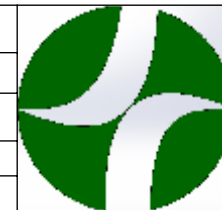

Secure the Phone Face to the Rear Body using the four screws provided.

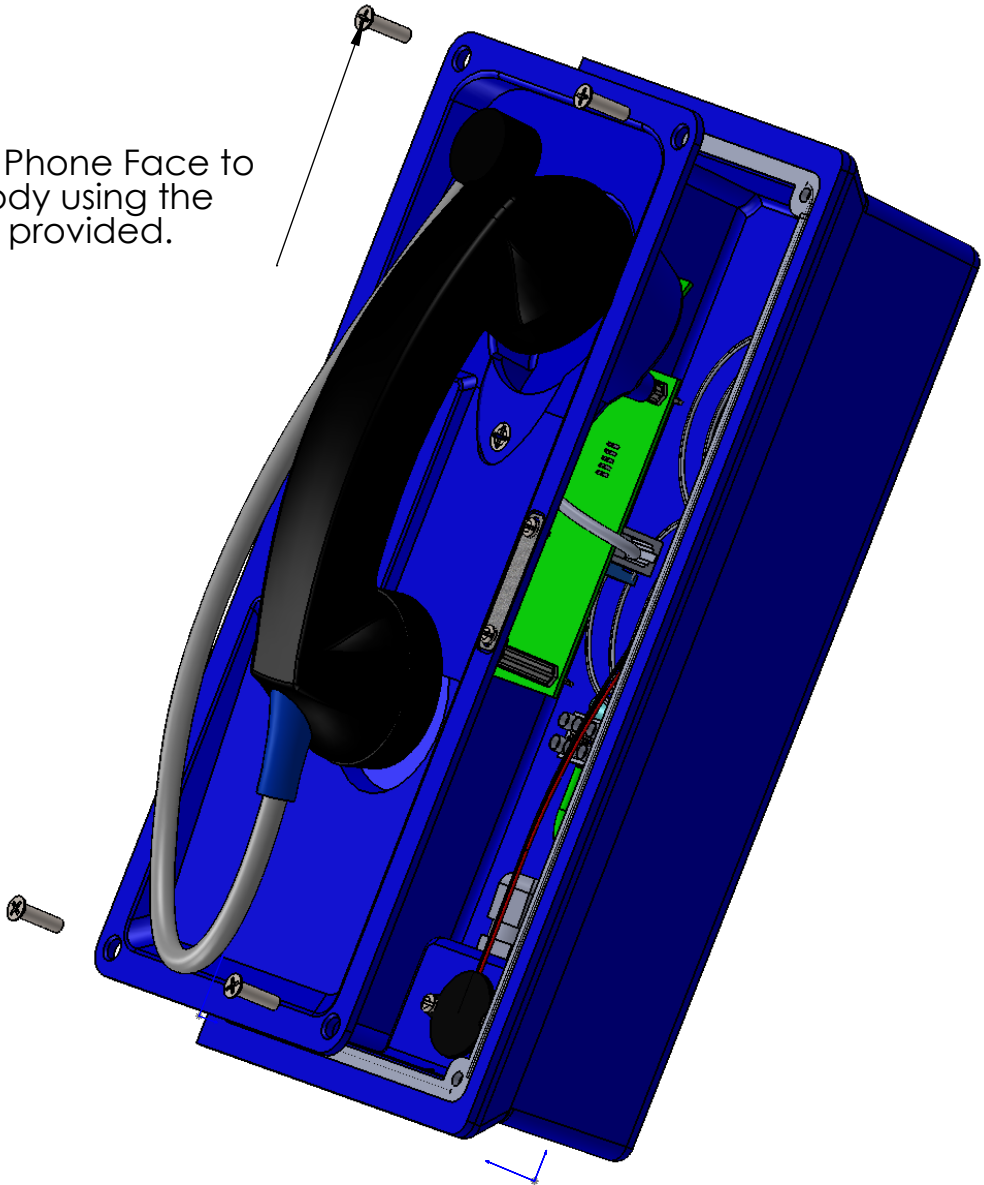

QA Critical check points	Tick



KJ Precision Engineering

16/388 Newman Road
 Geebung QLD 4034
 Australia
sales@kjeng.com.au
www.kjeng.com.au

Product	Series 6 Installation Manual			
Part	Face to Rear Body	Code		
Drawn by	Peter Thompson	Date	Thursday, 4 August 2016	
Drw #	MS--SOP1	Material		
Finish		Scale: 1:	Rev:	SHEET 3 OF 3

